



**V<sup>®</sup> VETO ELECTRIC BELL**

**220/230V RED**

**TYPE:EBL-2004(CB-8 " )**

**Manual Instructions for Bell:**

1. Take out the product from the inner box first check the voltage sticker on the cover of Bell.
2. Unscrew the bell cover of the product and install the aluminum base in the position that the customer needs to install.
3. There are black dots on the side of the bell cover, according to the base above the thimble, find the black spot position, cover the bell cover, tighten the screw.
4. Connect the two wires of the bell into the circuit. The two wires of the bell do not distinguish between the zero wire and the fire wire.
5. The working time of the bell can not exceed 5 minutes.
6. The bell has been setting internally, There is no need to reset the internal structure of the product otherwise it will affect the use of the product.