

INSTRUCTIONS FOR SAFE PRODUCT

HOTEL SAFE

SKU NO.:60293756

ITEM NO.:195ZB

Please do not keep emergency keys in your safe!

Dear valued customer:

Thank you for choosing our products! You've taken an important step in organizing and protecting your most valued possessions. Every series of our safes is professionally made and designed to provide safety. Please take time to read and familiarize yourself with the proper operating procedures of your new safe presented on the following pages.

Again, thank you for choosing our products!

Features:

Heavy duty steel construction offers excellent burglary protection. Locked by two strong bolts with $\phi 20\text{mm}$

Convenient motorized locking system, incorporating the latest technology.

Easy to read, large LED display let's you know the status of the safe.

Open by 4-6 digital code or emergency key, two override keys included

POWER SUPPLY

Battery

- The working voltage for the product is equal to 4 AA batteries.
- System will turn into micro power consuming state automatically.

CAUTION: When replacing batteries, do replace all the batteries at once and never use old and fresh batteries together. Never mix the specified batteries with other types of batteries in use.

OPEN THE DOOR

- Enter the personal code or master code, the door will open

CLOSE THE DOOR

- Enter the personal code and press “ # ”, the door will close.

SETTING THE PERSONAL CODE

- Enter the factory default code 1 2 3 4 the LCD display will indicate “open”.
- With door opened, enter four-digit code
- Press “ # ”, screen displays “CLOSED”, which means the door is closed.
- The screen will show the code entered, which means your new code has been accepted and you could open the door by your new code showed.

SETTING THE MASTER CODE

- Press “**” when the door is open, the display reads “PROG”.
- After “PROG” disappears, enter preset master code (The original master code of hotel mode is “011223”) and reading “- NEW -”.
- After “NEW” disappears, input your new code (6 digits) within 5 seconds, the display will read “AGAIN”.
- After “AGAIN” disappears, input your new code (6 digits) again within 5 seconds, then the display reads “DONE”, which means the new master code setting is successful, if not, the display will reads “ERROR” .

SECURITY FUNCTION:

• HIDE THE CODE

Press “*” before enter code, then the display will not show your the number and also will not show back the code you entered when the door closed.

• AUTOMATICAL LOCK

After four consecutive times of error codes, the system will be locked out automatically. During that time, the display will display “HOLD15” every press. 15 minutes later, the system will start again, allowing button entry.

OPENING THE SAFE IN EMERGENCY

Once the electronic circuit malfunctioned, or battery is low, or codes unknown, please use emergency key to open the door.

Use the emergency key to open the door

- Remove the emergency key cover.
- Insert the emergency key and turn anticlockwise to open the door.

ERROR INDICATION

When screen displays the following indications, it means there are errors. Please operate according to the following instructions.

- ERROR——means the code is incorrect, and you need to enter correct code.
- ERROR1——means the door can not be open normally, and the bolt is blocked. Please push the door slightly to loosen the bolt.
- ERROR2—— when the bolt is blocked (probably the door is left unlatched), there is no way to lock the door. Please push the door slightly to finish locking.

MOUNTING METHOD

Fix the safe in the place which is not easy to move.

- Drill holes for expansion bolts (or clamping screws) in the right place.
- Turn the expansion bolts counter clockwise to separate.
- Use the expansion bolts (or clamping screws) to secure the case to the wall.
- Make sure the case is mounted in place as required and then tighten all screws.