


# วิธีการใช้งานเต็นท์แบบกางอัตโนมัติ

รหัสสินค้า 60391781

บุคลิกภาพและการประกอบกางเต็นท์

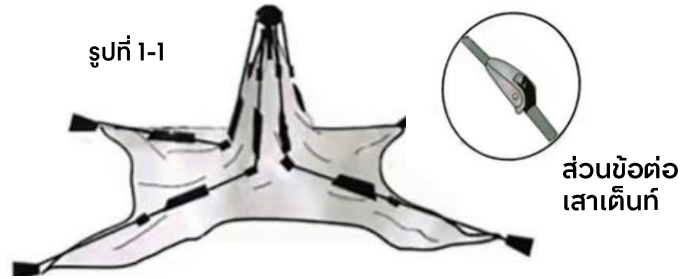

1. เลือกกางเต็นท์บนพื้นที่ราบ ใช้มือยกส่วนหัวของเต็นท์ขึ้น เต็นท์จะเริ่มกางขึ้นเองโดยอัตโนมัติ จากนั้นให้ยกขึ้นอีกจนเต็นท์กางสุด และตรวจสอบว่าส่วนข้อต่อโครงเต็นท์ทุกด้านนั้นกางออกจนสุด



2. ตรวจสอบบริเวณข้อต่อเสาเต็นท์ทุกอัน โดยการยกส่วนหัวของเต็นท์ขึ้น จากนั้นกดบริเวณส่วนฐานของชุดสปริงลง เพื่อยึดโครงเต็นท์ให้เข้าที่




3. ทำการยึดมุมเต็นท์กับพื้นดินด้วยสมอบก

บุคลิกภาพการประกอบกางเต็นท์



1. เก็บเชือกขึงกับสมอบกใส่ถุงเก็บอุปกรณ์ ใช้มือยกส่วนฐานของโครงสปริงขึ้น (ตามรูป 2-1) จากนั้นทำการยกสลักข้อต่อของเสาเต็นท์ทั้ง 4 อันขึ้น เพื่อปลดล็อกข้อต่อเต็นท์ให้สามารถปรับองศาและสามารถพับเก็บได้ (ตามรูป 2-2) แล้วพับส่วนข้อต่อตามภาพประกอบ (ตามรูป 2-3)

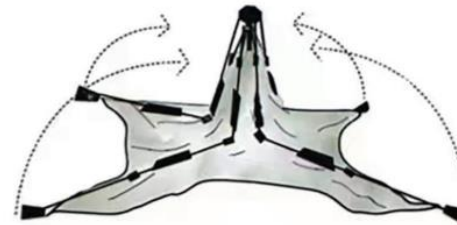

2. จับบริเวณส่วนหัวเต็นท์ และทำการดึงสลักเพื่อองข้อต่อส่วนล่างเข้ามา




3. เมื่อองข้อต่อส่วนล่างเข้ามาแล้ว ให้พับปลายเต็นท์เข้ามาด้านในก่อนและพับขึ้นอีกทบ และทำการม้วนเก็บให้เรียบร้อย

# INSTRUCTIONS FOR USING SPRING AUTOMATIC TENT

SKU NO. 60391781

BUILDING DIAGRAM

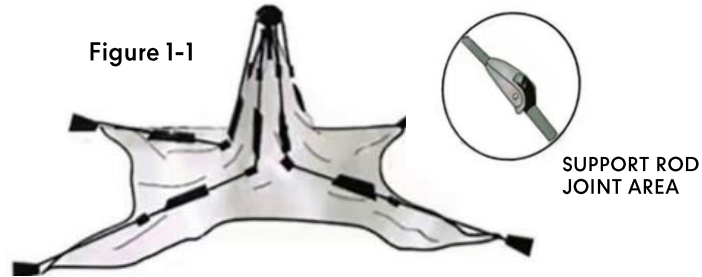

1. Select a flat ground to open the tent, hold the plastic top of the tent in your hand and lift it upwards. The tent will automatically open halfway. Continue to lift up until the outer tent is fully opened, and confirm that all joints of the tent support rod are fully extended.




2. Confirm that all joints of the tent are in place, lift the top of the tent, press down on the tent at the bottom of the top, and fix the tent pole.




3. Install ground nails around the corners of the tent to complete the tent construction.

STORAGE DIAGRAM

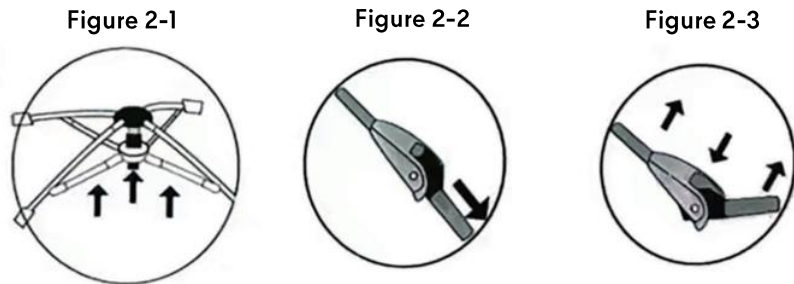

1. Put the wind rope and ground nails into the storage bag and push the spring device under the plastic top of the tent upwards (figure 2-1) to release the tent bracket from fixing. Then pull the four joints in the middle of the bracket upwards to make the joints bend inward and fold (figure 2-2), resulting in a folding effect (figure 2-3).

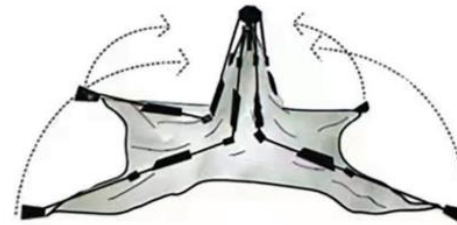

2. Hold the top of the tent and fold the lower joints inward in sequence.



3. Hold the top of the tent and fold the lower joints inward in sequence. Sort out the tent, fold it inward again, and fully fold the tent.